



P/N 900879-00
REV. NC, 02/2018

**FACE SURROUND KIT MODELS:
SURR54L-SS4S
SURR42L-SS4S**

INSTALLATION INSTRUCTIONS FOR DECORATIVE FACE SURROUND KIT.

SURR54L-SS4S FOR USE WITH:

SUPERIOR - DRL6554 AND DRL3054 FIREPLACE SERIES
ASTRIA - RHAPSODY54 AND SIRIUS54 FIREPLACE SERIES

SURR42L-SS4S FOR USE WITH:

SUPERIOR - DRL6542 AND DRL3042 FIREPLACE SERIES
ASTRIA - RHAPSODY42 AND SIRIUS42 FIREPLACE SERIES

| SURROUND KIT | | | |
|----------------|------------------------------|--|---|
| Cat. No. | Model | Description | Kit Contents |
| F3561 F3562 | SURR54L-SS4S SURR42L-SS4S | 4 Sided Surround (68" x 20") 4 Sided Surround (56" x 16") | <p>Panel Assembly, Top/Bottom (2 ea.) Panel Assembly, Sides (2 ea.) Temporary Carton Board, (2 ea.)</p> |

MATERIALS NEEDED

Adhesive Liquid Nails (Not supplied)
Painter's Tape (Not supplied)

GENERAL INFORMATION

Read this instruction sheet in its entirety before beginning the installation.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact you local distributor or dealer.

Parts may scratch and bend. Great care should be used in handling them.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE FIREPLACE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE FIREPLACE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

INSTALLATION INSTRUCTIONS

1. Partially peel back protective film from areas where surround panels meet (peel the back up to the front face edge).
2. Apply even coat of adhesive to the back of bottom surround panel (See Figure 1). **Note:** Repeat this step to sides and top surround panels prior to installing.
3. Install bottom surround panel centered with the fireplace onto the wall and flush with bottom edge of screen barrier (see Figure 2).
4. If additional support is needed, then wedge temporary carton board underneath bottom surround panel (A) and use painter's tape (not supplied) to hold the face to the wall. **Note:** Temporary carton board can be cut to desired length and is used to prevent surround panel from sliding down the wall while adhesive dries.
5. Install side panels (B), flush with edges of bottom surround piece and edge of screen barrier (see Figure 2).

Apply adhesive evenly to entire surface



Figure 1 - Evenly Apply Adhesive to Back of Surround Face (Back View Shown)

6. Install top surround face (C) (after steps 3 thru 5 are complete) flush with surround sides and edge of screen barrier (see Figure 3).
7. Allow the adhesive to cure at least 24 hours prior to the removal of the painter's tape and protective film. Discard the temporary carton board if used.
8. After adhesive has fully dried, peel off remaining protective film from face surround pieces in its entirety.
9. Installation is now complete. **Note:** See Figure 3 for an illustration of the completed installation.

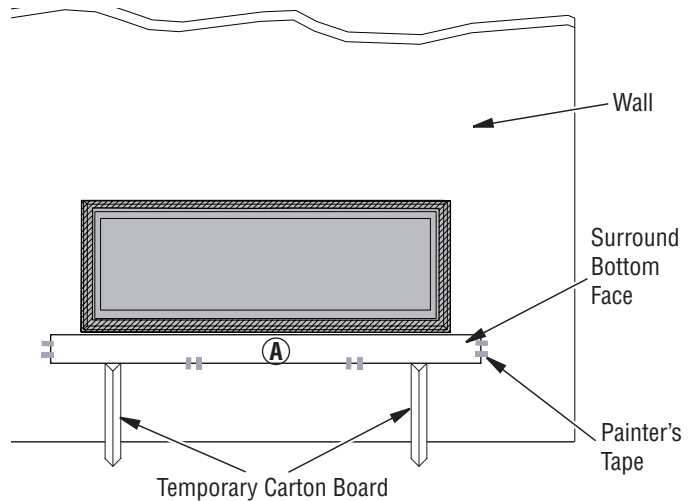


Figure 2 - Bottom Surround Face Installation

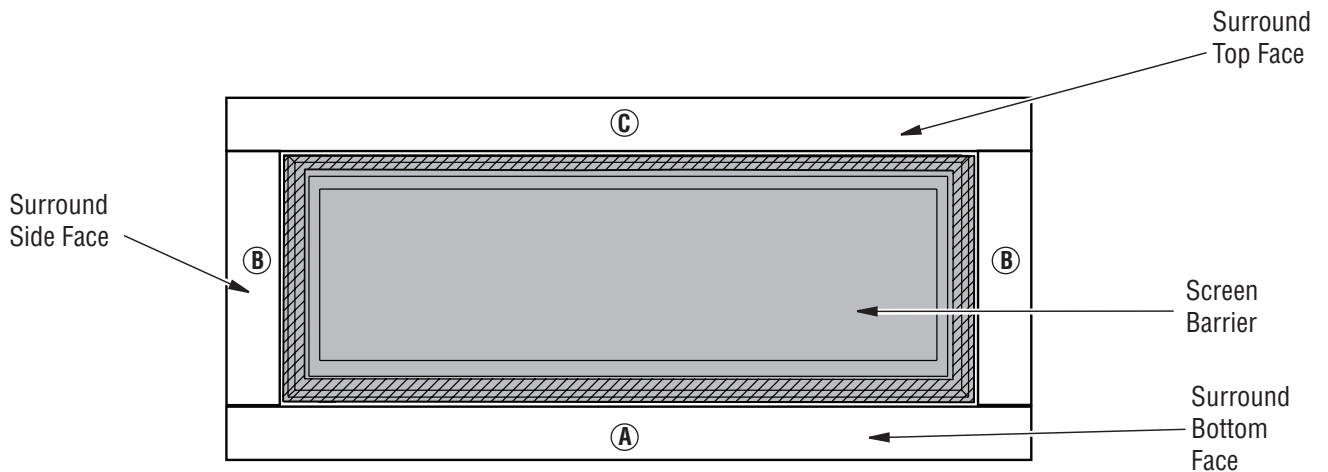


Figure 3 - Surround Face Installation

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, and prices, and also to discontinue colors, styles, and products. Consult your local distributor for fireplace code information.



Printed in U.S.A. © 2018 Innovative Hearth Products
P/N 900879-00 REV. NC 02/2018

1769 East Lawrence Street • Russellville, AL 35654

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE